 
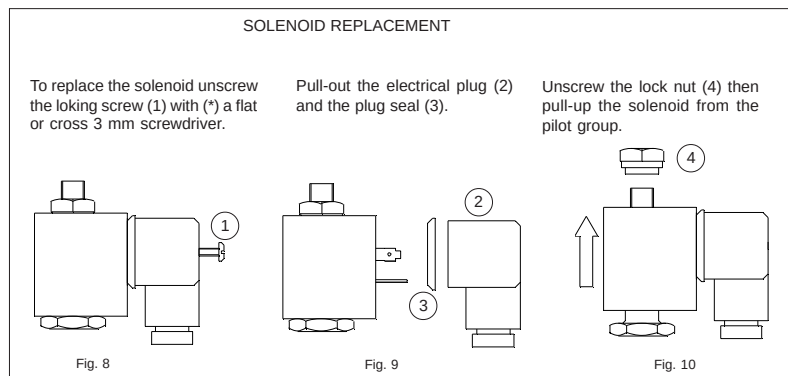 
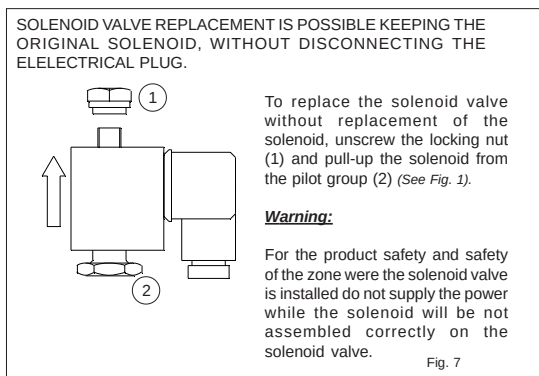 
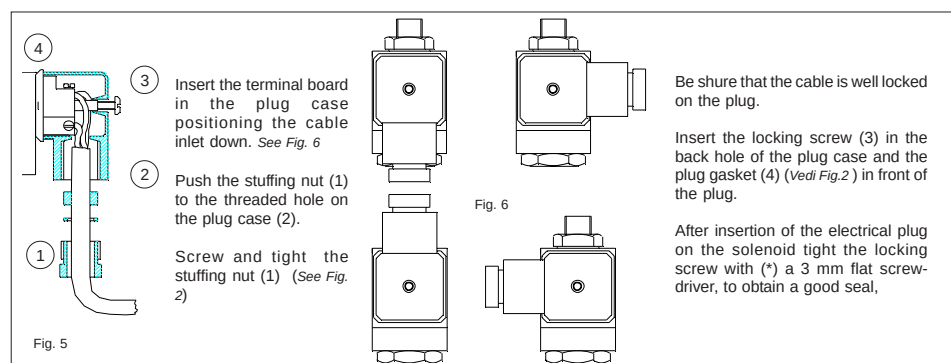 
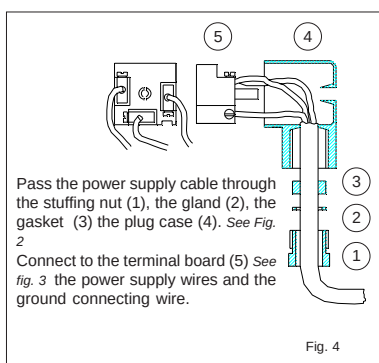 
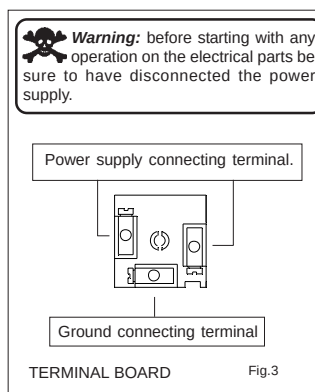 
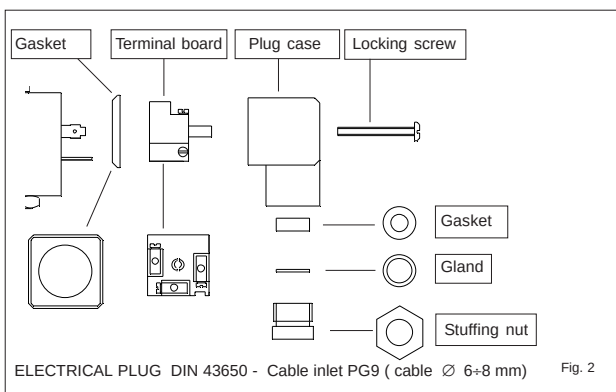 


Solenoid valves and pilot group in IP 65 manufacture

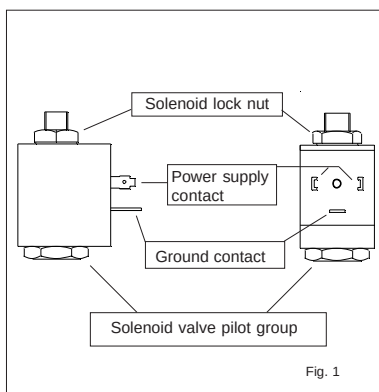

DO NOT SUPPLY THE POWER UNTIL THE FOLLOWING OPERATIONS AND CHECKS WILL BE SUCCESFULLY MADE.

CHECK THAT THE VALUE OF THE POWER SUPPLY INDICATED ON THE RATING LABEL AND THE MAIN POWER THAT WILL SUPPLY THE VALVE ARE COMPATIBLE.

CHECK THAT THE SOLENOID IS WELL POSITIONED AND LOCKED.

CHECK THAT THE POWER SUPPLY WIRES AND GROUND CONNECTING WIRES ARE CORRECTLY MOUNTED AND TIGHT ON THE TERMINAL BOARD.

CHECK THAT THE POWER SUPPLY CABLE IS LOCKED IN POSITION BY THE STUFFING NUT.

CHECK THAT THE PLUG SEAL IS CORRECTLY MOUNTED AND THE CONNECTOR IS FIRMLY LOCKED ON THE SOLENOID BY THE LOCKING SCREW.

CHECK THAT THE ELECTRICAL PLUG IS POSITIONED WITH THE CABLE INLET DOWN.